

www.keliss.com | hello@keliss.com

CaptainNext Technology Co., Ltd

1204E, T12,
Smart New City, Jihua 1st Road,
Chancheng District, Foshan City,
Guangdong Province, China

VAT N°: 9144 0600 MA52 U9BU 1L

United States

332 Applegarth Rd, Door 4 - 7,
Monroe Township, NJ 08831

1551 S Lilac Ave, Bloomington, CA, 92316


125 S State St, Back Loading Dock, Orem,
UT 84058

KELISS™ : US Trademark Sr N° : 97567688 EU Trademark N° : 018770909



NeoFlush 003 F02 INTELLIGENT TOILET

INSTRUCTIONS FOR USE AND INSTALLATION

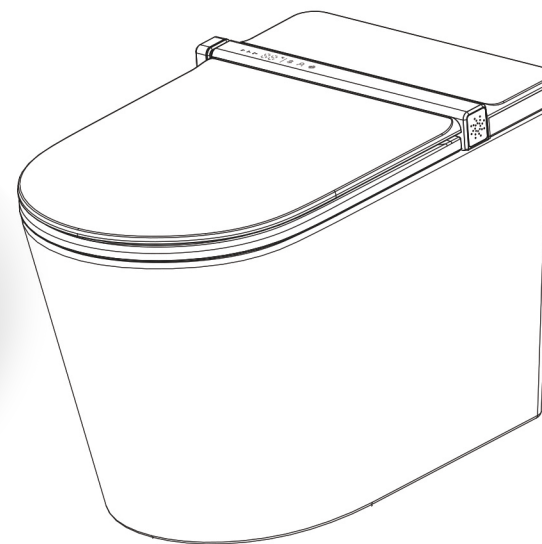

SANITARY WARE

The Installation Instructions and Warranty Card

- 1) Please read the manual carefully before installation and use.
- 2) Observe the warnings and notes marked in the product's specification.

The company reserves the right to interpret this instruction manual. If there are changes to products and technical parameters without further notice, please refer to the latest version of the instruction manual.

NeoFlush 003 F02

INTELLIGENT



TOILET

CONTENTS

1) Safety Warnings and Precautions	1-3
2) Function List	4-8
3) Product Structure and Name	9
4) Basic Instructions	10-11
5) Test Method	12
6) Use Instructions	13-16
7) Installation Method	17-18
8) Routine Maintenance	19
9) Product Parameter List	20-21
10) Product Warranty Card	22


1.Safety Warnings And Precautions

In order to prevent personal injury or property loss, please read the safety warnings and precautions carefully and use this product correctly.


 Warning	Please strictly follow the precautions in the manual. If the power cord is damaged or the product fails, it must be repaired by a professional clerk. It is strictly forbidden to disassemble the product by yourself.
 Precautions	<p>If you ignore this mark, personal injury or property damage may occur.</p> <p>People with physical, sensory, or intellectual deficiencies or lack of experience and common sense (including children) need to be accompanied when using this product, or turn off the power and use it as a normal toilet.</p> <p>For water source appliances connected by a detachable tube assembly, it must be replaced with a new hose maggot, and the old hose assembly cannot be reused.</p>

Don't disassemble or repair this product. If the power line fails, please ask the technician to replace it


Don't immerse the product in water and wash product by water


Prohibited disassembly


Don't disassemble or repair this product. If the power line fails, please ask the technician to replace it.



* There is a possibility of fire or electric shock.
* A professional is required to repair this product.


Prohibited immersion


Don't immerse the product in water and wash product by water.




* There is a possibility of fire or electric shock.

In order to prevent electric shock, confirm the wire is connected


Don't touch the socket with wet hands


Ground wire


In order to prevent electric shock, confirm the wire is connected.



* If it is not connected properly, leakage and electric shock may occur.
* If there is no grounding condition, please entrust an electrical professional to install it before use.


Prohibit touching with wet hands

Don't touch the socket with wet hands.




* Touching the power outlet with wet hands can cause electric shock.


1.Safety Warnings And Precautions

Don't turn on the electricity before the product is installed and valve opened


Don't use multiple plugs on the socket.


Prohibition

 
Don't turn on the electricity before the product is installed and valve opened.




* Violation may result in fire or malfunction.


Prohibition


Don't use multiple plugs on the socket.




* There is a possibility of heat generation or fire.
* Make sure the plug is plugged in properly.


Prohibition

Please pay attention to low temperature burns.
* When the temperature of the thermal insulation seat ring exceeds the body temperature, if it comes into contact with the skin for a long time, it may cause low temperature burns. For the old, weak, young and sensitive skin, please adjust the seat ring temperature, water temperature and drying temperature to low level before use.
* After using the high temperature function, please adjust the temperature to a low level to prevent skin damage to the elderly, weak, young and sensitive skin.


Prohibition

 Don't use industrial water or reclaimed water.




* May cause skin damage, skin disease and product malfunction.

Please pay attention to low temperature burns


Don't use industrial water or reclaimed water

Don't use cleaning agent or diluents during cleaning


Don't put the burning cigarette near toilet.



Prohibition

Don't use cleaning agent or diluents during cleaning.




* The product may be damaged or broken.



Don't get close to fire




* There is a possibility of fire.


Must implement

Pull out the plug when repairing. Please do not use damaged power sources, plugs and sockets.



* There is a possibility of electric shock.
* There is a possibility of fire.






Prohibition

Don't use this product for patients with cardiac pacemakers.

Pull out the plug when repairing Don't use this product for patients with cardiac pacemakers

1.Safety Warnings And Precautions

Don't step on the seat cover and seat ring. No playing with children. Don't use the faulty product

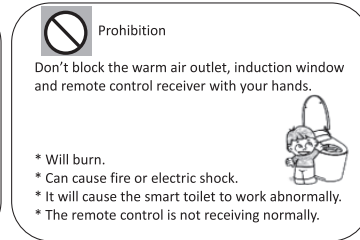
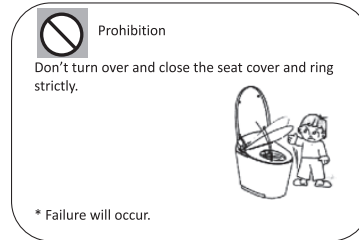
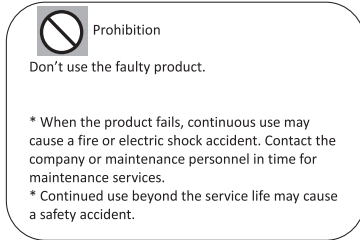
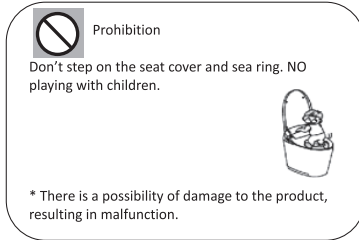


Don't turn over and close the seat cover and ring strictly

Don't block the warm air outlet, induction window and remote control receiver with your hands

Don't bend the connecting pipe

Avoid direct sunlight. Please replace the battery when the power is exhausted

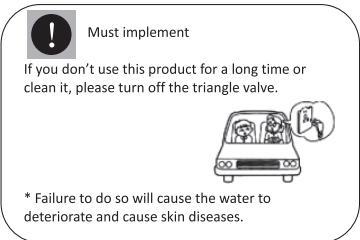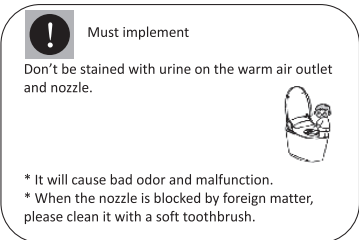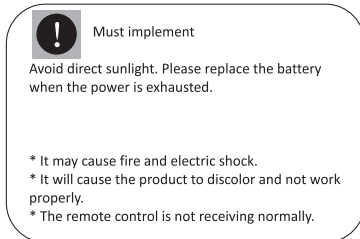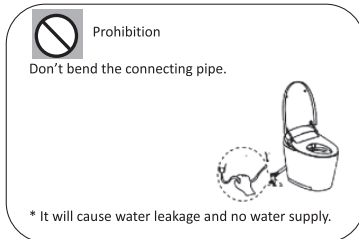

Don't be stained with urine on the warm air outlet and nozzle

If you don't use this product for a long time or clean it, please turn off the triangle valve

2.Function List

Cleaning Functions	Hip Washing and Defecation	The hip's cleaning nozzle sprays bubble and warm water to wash the hip deep dirt.
	Female Cleaning	The female cleaning nozzle sprays warm water with soft water pressure. It is specially designed for women's daily cleaning to effectively prevent contact infection. The nozzle moves back and forth to expand the cleaning range and enhance the cleaning effect.
	Cleaning Position Adjustment	The front and back position of the nozzle can be adjusted according to the user's body type.
	Flushing Setting	3 levels are adjustable. Customers can choose it by the water pressure.
Humanized Functions	Seat Temperature	Adjust the temperature of the toilet seat between normal temperature and 40 ° C to bring a mild sitting feeling.
	Warm Air Drying	Blow out warm air and keep hip dry and refreshing. (The drying will automatically blow down once before starting, so that the peculiar smell will not blow out with the warm air)
	Transient Heating	The water temperature is heated instantly to save electricity during cleaning
	Temperature Control	Multiple temperature settings are provided. Users can adjust the water temperature, seat temperature and air temperature according to their personal preferences.

2 .Function List

Humanized Functions	Seat Sensor		Intelligently judge whether the user uses the cleaning function to prevent wrong operation.
	Nozzle Cleaning		Automatically cleaning the nozzle before the cleaning of the intelligent toilet.
	Remote Control		The intelligent toilet can be easily operated through the remote control.
	Lighting		Even if the light is not turned on at night, the soft light from the intelligent toilet can make it easy for you to use the toilet.
	Convenient Knob		Simple operation can be done on the main body of the intelligent toilet without the remote control
	Voice Function		Voice function can broadcast parameter information (some styles)
Only For Damping	Triple Induction	Inductive Flap	The toilet cover automatically opens when approaching the sensing area and closes automatically after leaving the sensing area. Reduce the burden on the waist and make it easier to use.
		Kick Flap	Touching the switch with your foot can control the opening of the seat cover and the opening or closing of the seat ring. Do not need touch the toilet to avoid cross infection.
		Human Sensing Flap	The flip function can be implemented when people are close to the toilet for a certain distance (This function may affect the sensing distance due to environmental factors).
	Ring Remote Control.		The seat cover can be opened through the flip command of the remote control.
	Ring Remote Control.		The seat ring can be opened and closed through the flip command of the remote control.
	Adjustable Sensing Distance		Appropriate sensing distance can be set according to personal preference and toilet size.

2.Function List

Command Number	Function number	Command	Broadcast words
Welcome to use the toilet			
1	0	Xiaoai xiaoai/ Xiaowei xiaowei	Master, please tell me
2	1	Open cover	Ok, cover is opened
3		Open the upper cover	Master, cover is opened
4		Open cover	Ok, close cover
5		Open the toilet cover	Master, cover is closed
6	2	Close cover	Master, it can't be closed cover when you are seated
7		Close the upper cover	
8		Close cover	
9		Close the toilet cover	
10	3	Open seat ring	Ok, open seat ring
11		Open toilet ring	Master, cover is opened
12	4	Close seat ring	Master, t can't be closed ring when you are seated
13		Close toilet ring	Ok, close the seat ring
14	5	Turn on the night light	Ok. open lighting
15			Master, light is opened
16	6	Turn off the night light	Ok, close lighting
17			Master, light is closed
18	7		Ok, tart flushing
19		Open flushing	Master, flush is opened
20		Toilet flushing	
21	8	Open hip cleaning	Ok, open hip cleaning
22		Open male cleaning	Master, it can be opened when you are seated
23		Open hip cleaning	Ok, open hip cleaning
24		Open cleaning	Ok, warm water cleaning
25	9	Open female cleaning	Ok. open female cleaning
26		Open female cleaning	Master, it can be opened when you are seated
27		Open female cleaning	Master, female cleaning is opened
28		Close female cleaning	Ok. Female cleaning is closed
29	10	Stop	
30	11	Open drying	Ok, drying is opened
31		Warm air drying	Master, it can be opened when you are seated
32			Master, drying is opened

2. Function List


33	12	Close drying	Ok, drying is closed
34			
35	13	Increase water pressure	Ok, water pressure has increased
36	14	Decrease water pressure	Ok, water pressure is decreased
37			water pressure is highest
38			water pressure is lowest
39	15	Forward Tube location	Cleaning location is forward
40	16	Backward Tube location	Cleaning location is backward
41	17	Increase seat temperature	Seat temperature has increased
42	18	Decrease seat temperature	Seat temperature has decreased
43			Seat temperature is highest
44			Seat temperature is lowest
45	19	Increase water temperature	Water temperature is increased
46	20	Decrease water temperature	Water temperature is decreased
47			Water temperature is highest
48			Water temperature is lowest
49	21	Increase wind temperature	Wind temperature is increased
50	22	Decrease wind temperature	Wind temperature is decreased
51			Wind temperature is highest
52			Wind temperature is lowest
53	23	Reciprocating cleaning	
54			Reciprocating cleaning is opened
55	24	Close reciprocating cleaning	Reciprocating cleaning is closed
56			
57	25	First gear water temperature	Water temperature is first gear
58	26	Second gear water temperature	Water temperature is second gear
59	27	Third gear water temperature	Water temperature is third gear
60	28	Close water temperature	Water temperature is closed
61	29	First gear water temperature	Seat temperature is first gear
62	30	Second gear seat temperature	Seat temperature is second gear
63	31	Third gear water temperature	Seat temperature is third gear

2. Function List

64	32	Close seat temperature	Seat temperature is closed
65	33	First gear wind temperature	Wind temperature is first gear
66	34	Second gear wind temperature	Wind temperature is second gear
67	35	Third gear wind temperature	Wind temperature is third gear
68	36	Close wind temperature	Wind temperature is closed
69	37	First gear water pressure	Water pressure is first gear
70	38	Second gear water pressure	Water pressure is second gear
71	39	Third gear water pressure	Water pressure is third gear
72	40	Open voice	Voice is opened
73			
74	41	Close voice	Voice is closed
75	42	Increase volume	Volume is increased
76			
77			
78	43	Decrease volume	Volume is decreased
79			
80			
81			
82			
83			Volume is lowest
Command			
Wake-up Word			Xiaoai xiaoi/ Xiaowei xiaowei
Welcoming speech			
Conclusion			I'm off the line. any help please call me

Remark: Voice function is only available for some models

3.Product Structure and Name

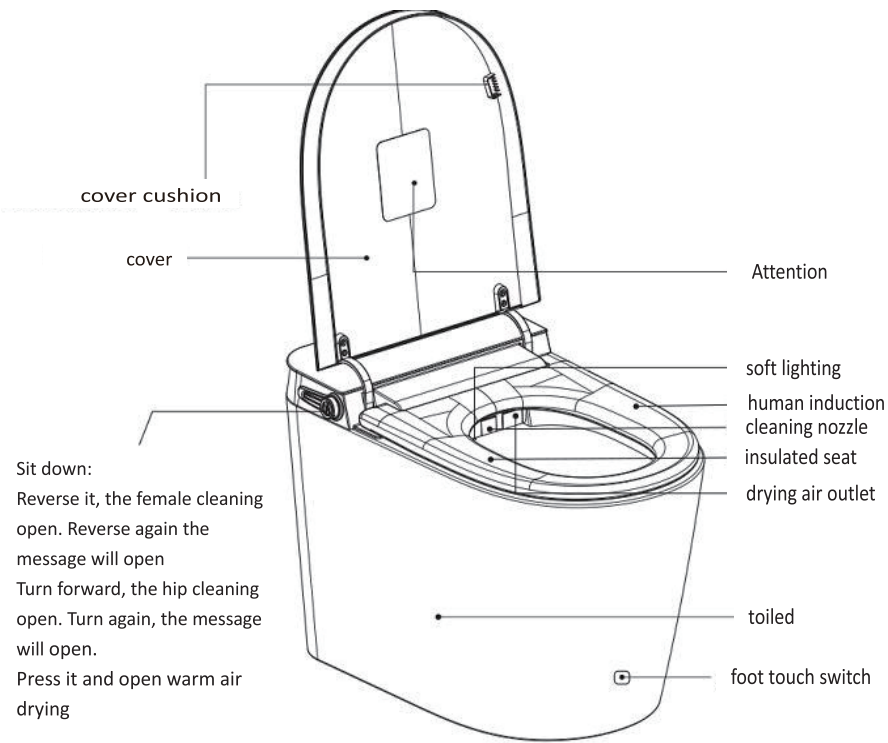





Not sit down:
Press it to flush automatically.

Sit down and reverse it, the female cleaning open. reverse again the message will open

Turn forward, the hip cleaning open. Turn again, the message will open

Press it and open warm air drying

 4. Basic Instructions

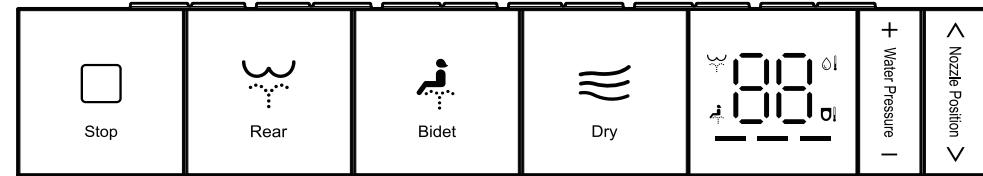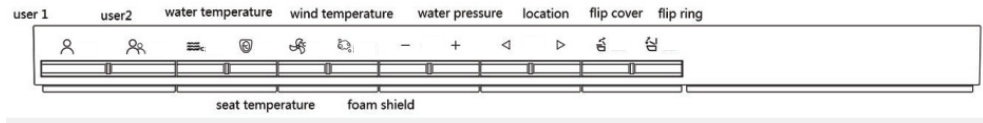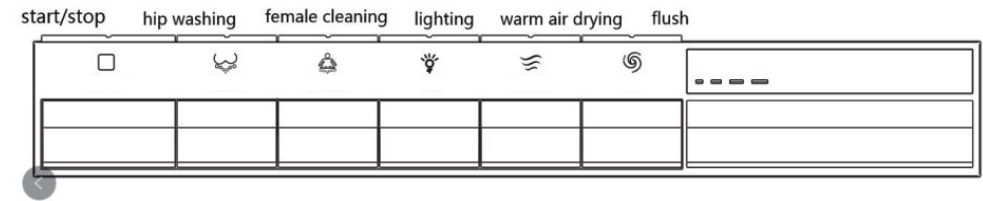


Remote control pairing instructions:

In the power-off state, long press the remote control for female cleaning and then all the indicator lights will turn into the red state, the pairing will be successful when the toilet is powered on again.

Gifts are not guaranteed



 Flange ring




Water supply valve

Note: Please replace the Braided tube every three years
(it may cause water leakage)



 Braided tube




Battery




Instructions

4. Basic Instructions

Sensing gear distance (the functions of automatic flap and kicking are only for series A automatic flap / ring products)

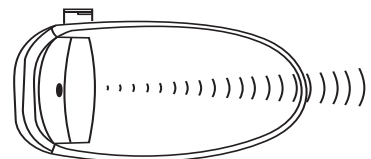


Automatic sensing area

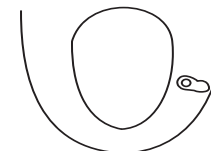


Seat sensing area

open automatically when you close to the sensing area

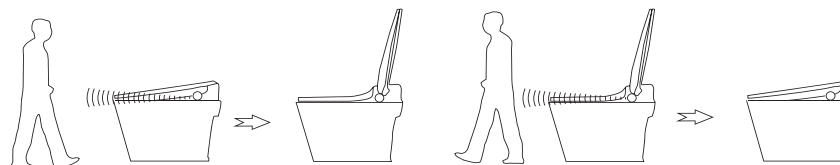


Automatically close the seat cover after leaving the sensing area

Open Cover

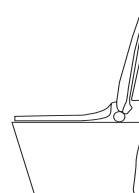

Open Ring

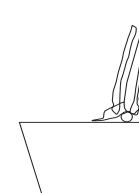


Close cover/Close Ring



5. Test Method


1. Turn the water supply valve to the counterclockwise direction.
- 2.Check whether there is water leakage of the water supply pipe

- Confirm that the water supply is normal
- Check whether there is water leakage for connecting part

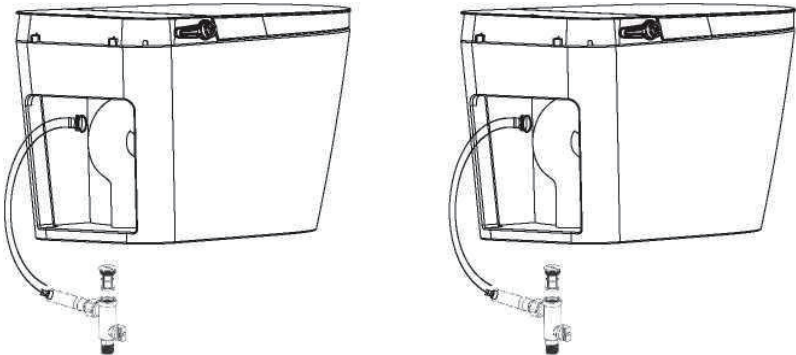

- 3.Pug into the socket and check the indicator light of the product
4. Check whether all functions work normally

- If is the light on
- Test and confirm the functions are normal
- Don't the plug with wet hands, which may cause electric shock
- by pressing the remote control's buttons

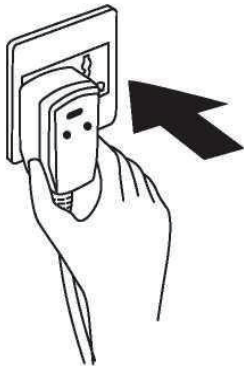

6. Use Instructions

Name	
Start/Stop	Short press: press this key to stop corresponding functions when hip washing / women washing / drying and other functions are running
	Long press: start and stop
Hip washing	When sitting, press the hip washing movement button
	1、 Short press once: the spray bar is self-cleaning for 5S at the starting position, and then extends to the last hip washing position, and the water will last for 120s
	2、 Short press the hip washing button once, and the spray bar will become cleaning movement, and then short press again to cancel the movement
	3、 Long press the hip washing movement button and start to cleaning function.. It's convenient for drying and automatic flushing after hip washing or female washing every time.
	4、 The cleaning time is 120 seconds and the drying time is 180 seconds
Female cleaning	When sitting, press the female cleaning movement button
	1、 Short press once: the spray bar is self-cleaning for 5S at the starting position, and then extends to the last hip washing position, and the water will last for 120s
	2、 Short press the female washing button once, and the spray bar will become cleaning movement, and then short press again to cancel the movement
Lighting	Short press: night light switch
	Long press: adjust the radar sensing distance (this function is only available for models with radar style)
	Long press, release, long press again immediately
Warm air drying	The function need in sitting status
	1、 Press the warm air drying key, the drying baffle will pop up automatically for warm air drying and continue to work for 180s
	2、 When cleaning, directly switch to drying, flush immediately after the spray bar stops water, and the heater start to work
	3、 During the drying , press the start / stop key, leave the seat or switch to the cleaning function, the heating wire will be turned off immediately and the fan will be turned off.
	In standby status, long press "warm air drying" to enter the flushing time setting function
	Flush gear

6. Use Instructions

	Style for Pulse
	U0: flush 5S, drain 4S, water filling 5S
	U1: flush 5S, drain 6S, water filling 6S
	U2: flush 6S, drain 7S, water filling 7S
	U3: flush 7S, drain 8S, water filling 8S
	U4: flush 8S, drain 9S, water filling 9S
	Style for water tank
	U0: flush 5S, drain 5S, water filling 3S
	U1: flush 5S, drain 5S, water filling 4.5S
Flush	Short press: flush
	Long press: time adjustment of automatic cover and ring falling
	Long beep "drip" the time of automatic cover and ring falling is 150 seconds
	Short beep "drip" the time of automatic cover and ring falling is 60seconds(only for models with flap motor style)
Water temperature	Short press for 4 gear water temperature: Normal ,low 34'C,medium 37'C,high 40'C
Seat temperature	Short press for 4 gear seat temperature: Normal(stop heating),low 34'C,medium 37'C,high 40'C
Wind temperature	Short press for 4 gear wind temperature: Normal(cold wind),low 40'C,medium 50'C,high 60'C
Foam shield (only some styles)	1、 When sitting in the automatic foam shield mode, the foam shield is automatically turned on
	2、 Short press the foam shield key to turn on the foam shield
	3、 Long press the foam shield key to turn on / off the foam shield when is seated
Water pressure	1、 three grades for water pressure
	2、 When the hip washing and women washing modes are running, briefly press the remote control "+ -water pressure " the water pressure increases / decreases by one gear

6. Use Instructions

Location	Condition: under cleaning condition
	1、 6 gears for spray bar
	2 、 When using hip washing and female washing functions, you can press the position key to adjust the water spraying position, so as to wash more accurately.。
Flip cover	Short press: open/close seat cover
	Long press: turn off the radar sensing function
	Short press: open/close seat ring
	Long press: enter the flap angle adjustment mode, and then press "+ water pressure -" to adjust the opening angle of the seat cover. Press briefly again to enter the turning angle adjustment mode, and then press "+ water pressure" to adjust the opening angle of the seat ring, Briefly press again to exit the setting mode.
Wall moistening function	toilet washes and moistens the wall for 1s when sensing
Kicking function	1、 For the model with radar and flip cover, kick the first ring, kick the second and flush once.
	2、 For models without radar and flap, kick the first flap, kick the second ring., kick the third then flush once.
	3、 For models without radar and flap, the kick only performs the flushing function
Auto flush	1 、 Manual flushing: press the "flushing" key to perform flushing once when the machine is turned on, When not seated, briefly press the knob key to perform a flushing.
	2、 Automatic flushing: the system automatically flushes once when the drying is turned on when the human body is seated. After the human body is seated for 6 seconds, if the drying function is not operated, it will automatically perform a flushing after leaving the seat.
	3 、 Long press the air temperature key, and then long press the seat temperature key, then turn off the automatic flushing function.
Sterilization function (only some styles))	1 、 5 s after closing the toilet cover, the spray rod will automatically extend, the UV light will be on, and the sterilization time is 70 s.
	2 、 In the process of sterilization, open the toilet cover, the sterilization will stop, and the spray drying will retract automatically
	3 、 Turn off the sterilization function: long press the air temperature key , and then long press the water temperature key to turn off the sterilization function.
User memory function	1 、 Set your own appropriate water temperature, seat temperature, air temperature, water pressure and spray rod position
	2、 Long press by user 1 or user 2 to store when you are setted
	3、 Press user 1 or user 2 to read the stored parameters during every use.

6. Use Instructions

Alarm	Alarm mode: turn off all functions with buzzer
	E1:seat temperature sensor open circuit or short circuit
	E2:seat ring temperature overheating
	E3:water temperature sensor open circuit or short circuit
	E4:overheating of water temperature
	E5: abnormal drying fan
	E6:environment sensor open circuit or short circuit
	E8: instant heating module communication detection fault

Remarks: after the alarm, it is necessary to power off and restart each time.

7. Installation Method

一. Product size and installation environment

1. Installation environment


Leave enough space as shown in the figure.

- The standard position of the sewage pipe from the wall is declared as 305 or 400mm;

- The water supply valve is at least 150mm away from the ground;

*The socket is within 1.2 meters of the machine.

- Make sure that the door switch will not knock the product.

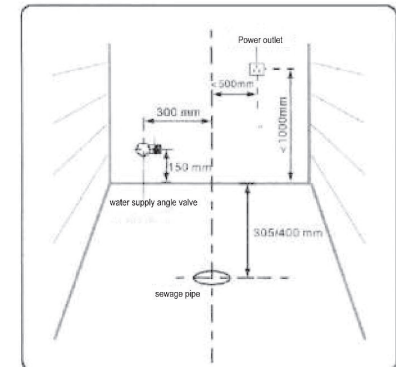


2. Water pressure requirements

(1) Minimum water inlet pressure: $0.1\text{MPa} \geq 10\text{L/min}$. If this pressure is not reached, it may affect the normal operation of the product







(2) When used with other products such as faucets, it must also meet the above first requirement

The overall size is 683*425*485mm (subject to the actual product)

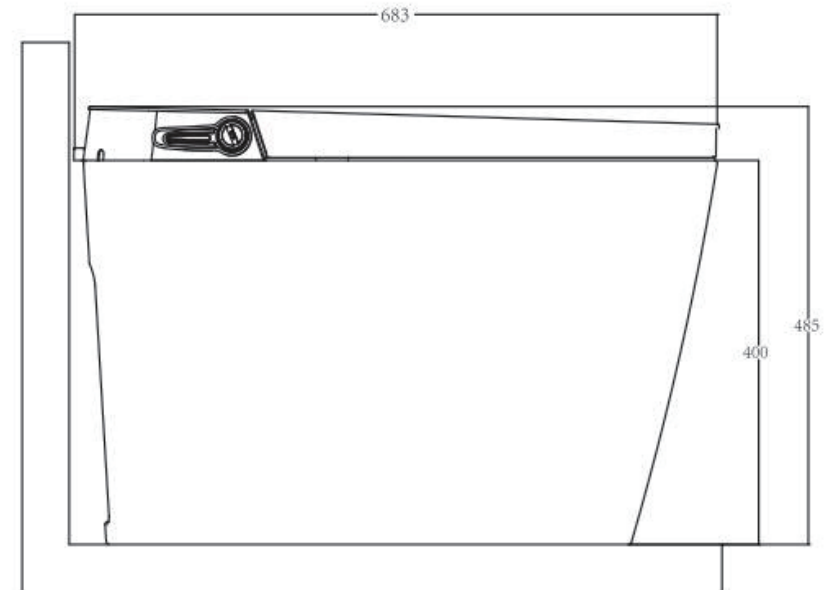

7. Installation Method


1. Cut off the blowdown pipe above the ground with a cutter and keep it for 3-5mm.
2. Put on the paperboard, adjust the position, and draw the outer contour of the ring with a pencil
3. Glass glue is placed in the middle of the ring, and the width of glass glue is 6mm
4. Put the flange ring on the drain outlet and press it firmly
5. Two people are on the left and right sides of the toilet, lift the toilet, align the bottom with the black line and press the glass glue. press the toilet hard to make the glass glue firmly.
6. Apply the glass glue by hand. If there is no overflow, apply some glass Li glue for a complete circle, or it is easy to breed bacteria -the glass glue shall not be higher than the lower surface of the Induction window (as shown In the upper right figure), and the surface of the Induction window shall not be dirty

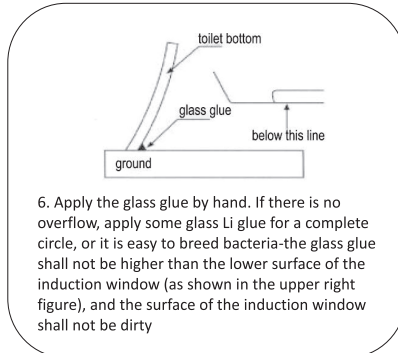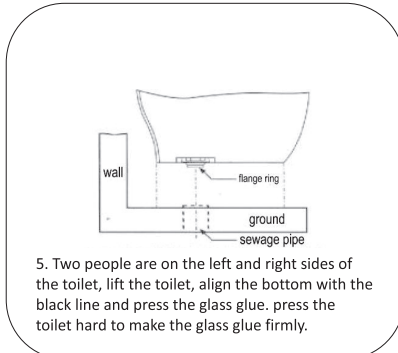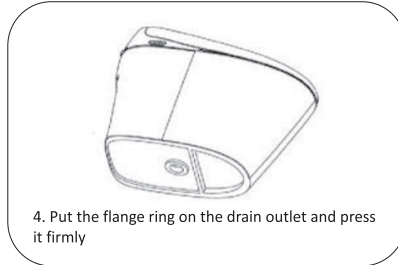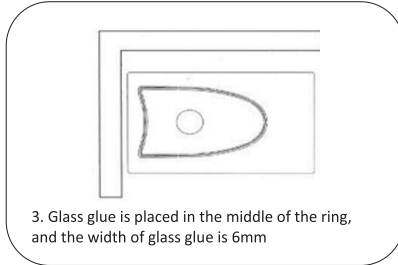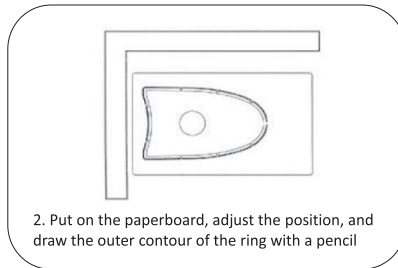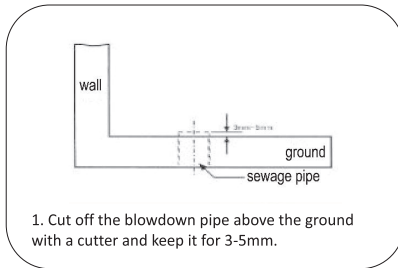

8. Routine Maintenance


一. Toilet and ceramic cleaning

- use a soft and wet cloth to dry and scrub .If necessary, wipe with a cloth stained with detergent and then scrub with a wet cloth .
- ★ note: as ft Is an electrical product. In order to prevent water from entering, do not wash ft directly with water. After cleaning, be sure to wipe the ceramics with a soft cloth

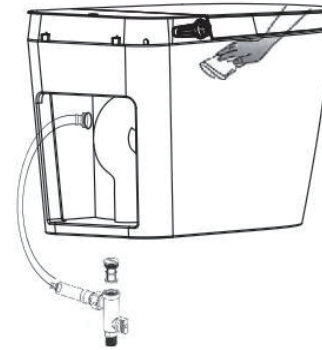

二. Filter cleaning

- ♦ If Impurities In tap water block the filter screen; it will cause poor water inflow and affect the use of the product.
- * Please clean the filter screen in the filter regularly. It is recommended to clean once every 6 months.
- Before cleaning the filter screen, first close the water source, then open the fitter cover plate counterclockwise^ take out the fiber screen, wash the dirt on the fitter screen and clean it with a toothbrush if necessary.
- After cleaning, tighten the filter screen clockwise and check whether there is water leakage.

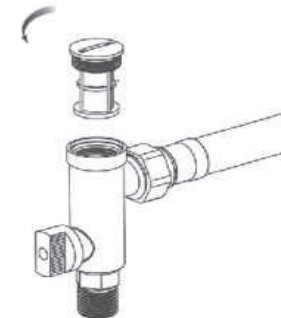

9. Product Parameter List

Product part or function	phenomenon	Inspection items	Exclusion method
Toilet body	Out off work	Does the electricity turn on	Open electricity
		Is the power plug plugged in	Plug in socket
		Power failure or not	Check again after power supply is restored
Hip cleaning female cleaning	The sprinkler does not spray water	Is the water supply valve open	Open valve
		Whether the water supply is cut off	Check again after water supply is restored
		Whether the nozzle is blocked by matters	clean the nozzle
		Is the sensor sensing	Readjust the sitting posture and confirm that the sensor works normally
	Low water pressure	Is the water pressure set at weak gear	Reset the water pressure
		Whether the water inlet channel is unblocked	clean the inlet filter
	Water stop	Whether the automatic stop time of cleaning function is reached	restart the cleaning function
		Is the sensor sensing	Readjust the sitting posture and confirm that the sensor works normally
	Low water temperature	Is the water temperature set at low gear	Adjust water temperature
Warm air drying	The warm air stops	Whether the drying automatic stop time is reached	Open drying function
		Is the sensor sensing	Readjust the sitting posture and confirm that the sensor works
Seat ring heating	Low seat temperature	Is the "seat heating" key open	Press the "seat ring heating" key to open heating
		Is the seat temperature set at low gear	Readjust the gear

9. Product Parameter List

Project			Parameter list	
Rated voltage			Single phase z220V/50HZ	
Rated power			Inlet water 15 ° C, outlet water 40 0 C, flow 650ml / min, power 1550W	
Power length			1.5m	
Water supply mode			Direct connection to tap water pipe	
Service water pressure flow			0.1-0.55MPa,Water spray volume3lOL/min	
Cleaning device	Water spray volume	cleaning	Working pressure 0. 2MPa<0. 8L/min	
		female	Working pressure 0.2MPa<0. 8L/min	
	Water pressure adjustment		Three gear adjustment	
	Water temperature adjustment		Four gear adjustment	
	Air temperature adjustment		Four gear adjustment	
	Nominal water consumption		《5l (nominal condition: o. 125mpa-0. 55MPa outlet flow 8-12L/ min) flushing gear adjustment refers to flushing setting (use method 15)	
Seat device	Safety device		Computer temperature control and temperature control switch	
	Seat temperature adjustment		Four gear adjustment	
	Seat ring voltage		220V safety voltage	
	Safety device		Computer temperature control and temperature control protection	
Flushing mode			Super rotating jet siphon flushing	
Used water temperature			10-35X(10-35 ° C recommended)	
Ambient temperature			3-40°C (10-35 ° C recommended)	
Product size			683X425X485rrm	
Outer box size			740X430X550mn	
Water efficiency grade index of toilet In litres				
Water efficiency grade of toilet		Level 1	Level 2	Level 3
Average water consumption of toilet		<4.0	<5.0	<6.4
flush water consumption of double flush toilet		《5.0	<6.0	《8.0
Note: In each water efficiency grade, the average half flush water consumption of double flush toilet shall not be greater than 70% of the maximum limit value of full flush water consumption.				

10. Product Warranty Card

Thank you for purchasing our products. In order to protect your rights and interests, our company guarantees as follows:

If you find any product quality problems, please contact the purchasing office or our after-sales service office.

Product Name	Intelligent toilet	Product model	
Purchase date		Serial number	
Customer name		Warranty period	
Contact address			
Maintenance record	Fault and handling	date	Repair personnel

Product warranty

- *When purchasing this product, please fill in the product warranty carefully and keep it properly.
- *Within 30 days from the date of purchase, if the product is found to have quality problems under normal use the company will be responsible for replacing it after being certified by the company's technicians.
- *During the warranty period, the company will repair the faults under normal use for you free.
- *For services within the scope of paid maintenance services during the warranty period, maintenance fees will be charged as appropriate

Paid maintenance service

- *Failure and damage due to improper use or man-made after installation.
- *Faults caused by unauthorized disassembly or modification.
- *Faults caused by fire, typhoon, flood, earthquake, lightning and other natural disasters and abnormal voltage.
- *Move the machine for installation according to the customer's requirements.
- *The service life of consumable parts has expired.
- *The product has been repaired by technicians not recognized by the company.
- *Faults and injuries caused by use outside ordinary homes (such as public places).
- *The warranty card information was not filled in and the use's receipt was not sent back to the company.

Please complete the warranty card information and send the user's receipt back to the company, or you will not enjoy the warranty policy.

Name		Contact number	
Contact address			
shop		Purchase date	
Product model		Satisfaction	Very Satisfied <input type="checkbox"/> fine <input type="checkbox"/> dissatisfied <input type="checkbox"/>
Serial number		signature	